
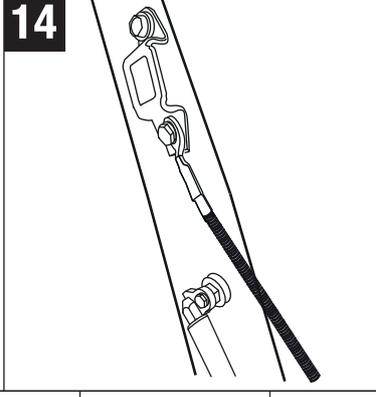
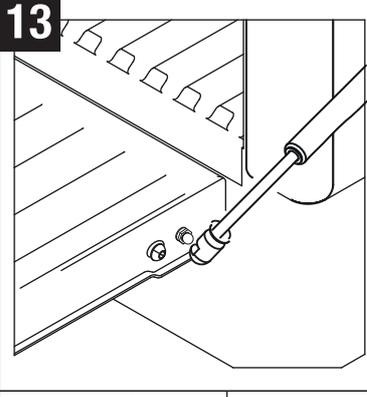
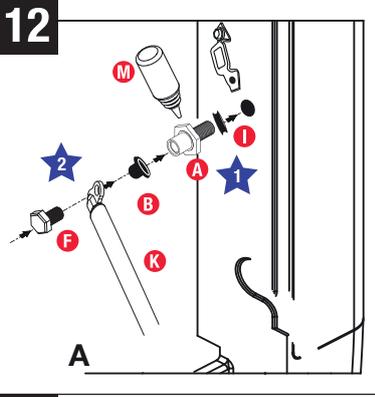
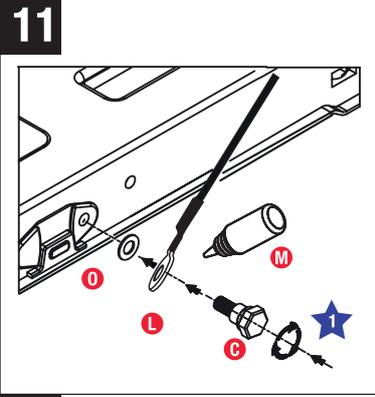
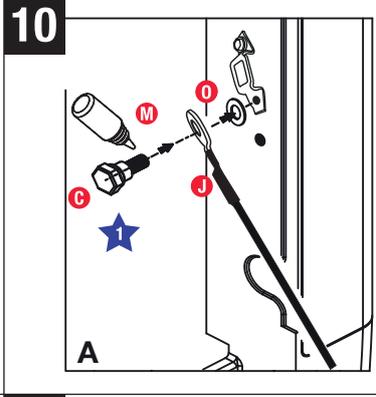
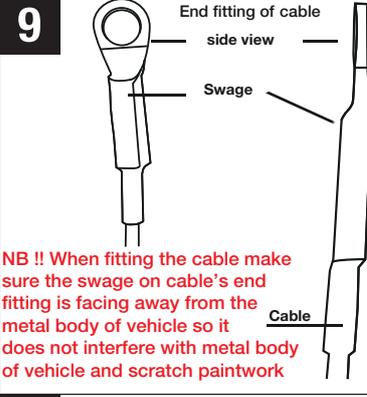
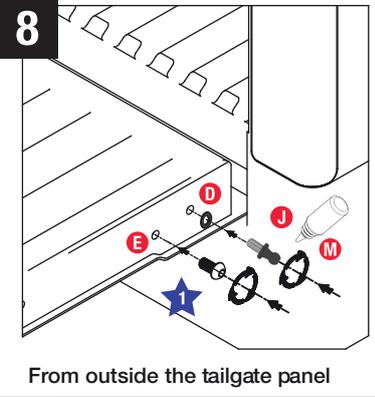
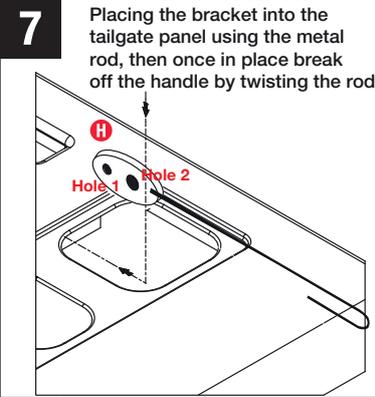
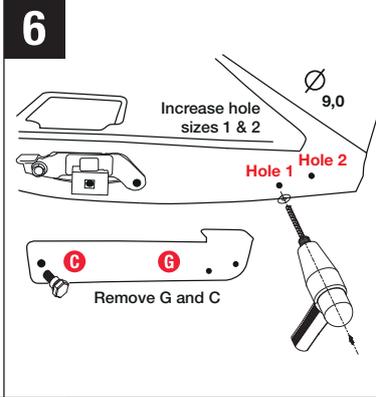
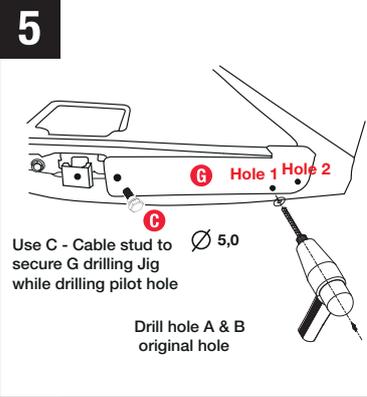
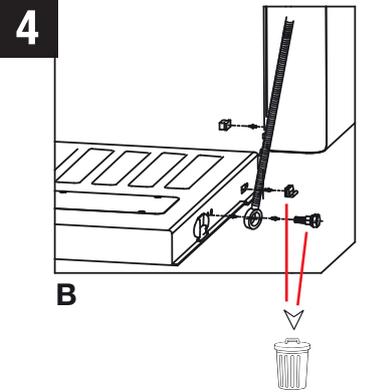
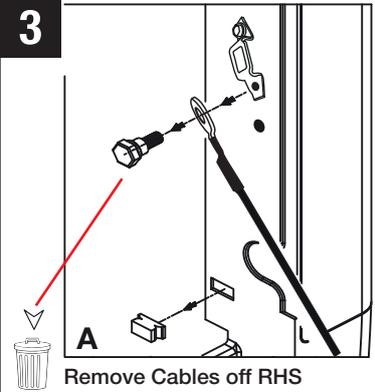


**EZDown Reloaded Instruction  
- 1st Fitment**

**EZDown Reloaded MERCEDES BENZ X CLASS – RL0710**

**1**  
RHS and LHS are determined when sitting in the Drivers side of the Vehicle.  
  
Recommended to use rust inhibitor where drilled.  
  
**Fit kit on RHS only**

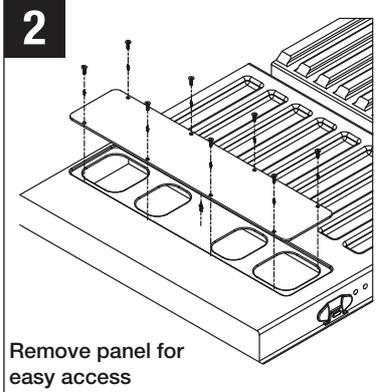

**15**  
Ensure Cables are taking Tailgate Load and NOT the Damper.





FITTING CODE	MANUFACTURER	MODEL TYPE	YEAR	STOCKIST	PRODUCT	REVISION	LABOUR	DATE	PAGE
RL0710	MERCEDES	X CLASS	2016 onwards	GENERAL USE	EZDOWN RELOADED	2	20min	17/05/2018	1
TORQUE - N.m	★ 17.5N.m±2.7N.m		★ 17.5N.m±2.7N.m					www.ezdown.co.za	

**NB: After installation please close tailgate gently to ensure that there is no interference with any hardware.**

**IMPORTANT:**  
No liability will be incurred by Industrial Specialised Applications company, for injury, death, or property damage caused by a product which has been set up, operated, and/or installed contrary to EZDown installation guide/manual, or which has been subjected to misuse, negligence, or accident, or which has been repaired or altered by anyone other than Industrial Specialised Applications, or which has been used in a manner or for a purpose for which the product was not designed.



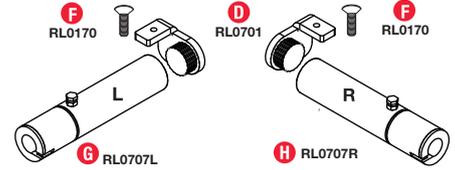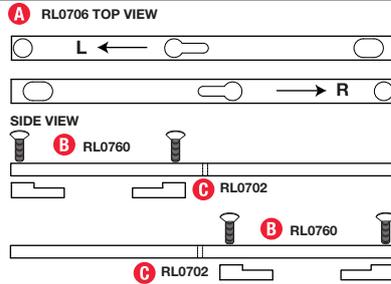




**EZDown Reloaded Instruction  
- 2nd Fitment**

**EZDown Reloaded MERCEDES BENZ X CLASS – RL0710**


**1** RHS and LHS are determined when sitting in the Drivers side of the Vehicle.

**CAUTION:**  
Do not remove the red bolt from cylinder D until fully installed - if you do you will loose the pre-tension.


**CRITICALLY IMPORTANT:**  
The RED bolts must be removed before you open the tailgate after installation. Failure to do this will create irreparable damage and warranty will be void.

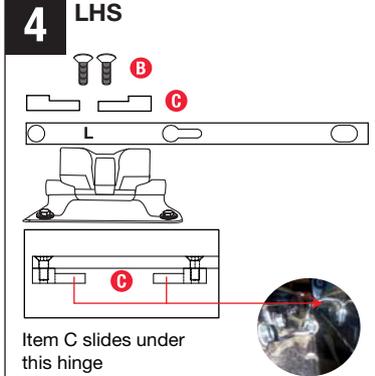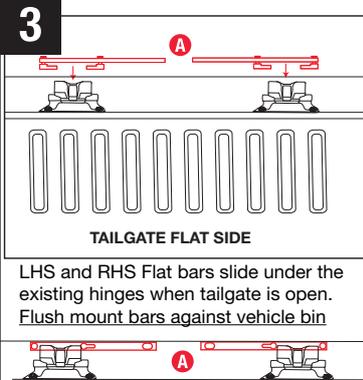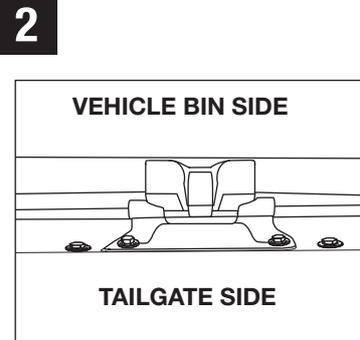











**5** LHS Flat bar to be Flush mounted against vehicle bin

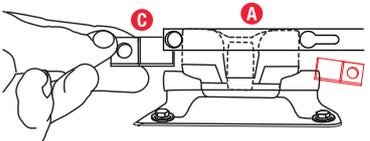

Position LHS clamps and insert bolts as shown in slide 4.



Repeat slides 3 - 5 for RHS

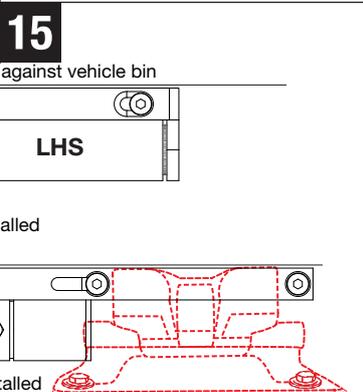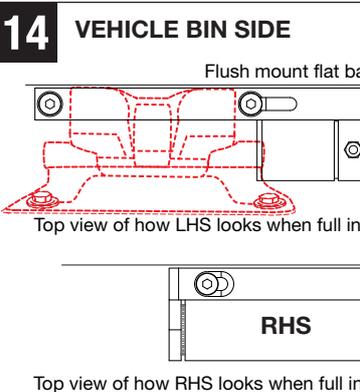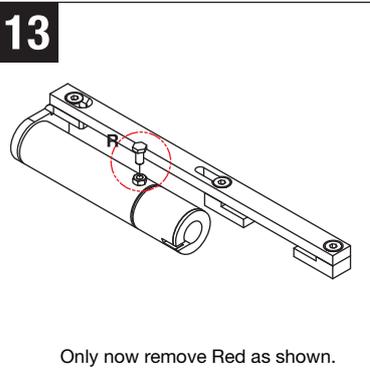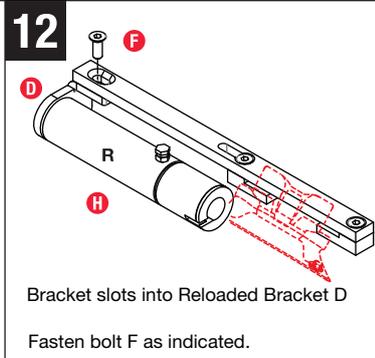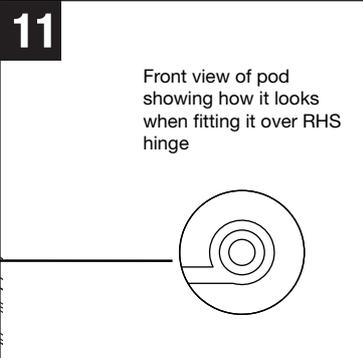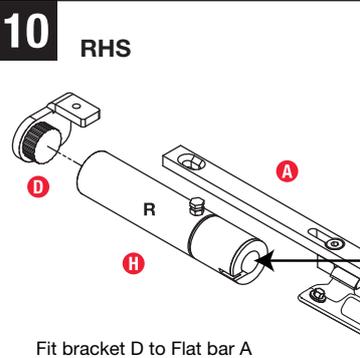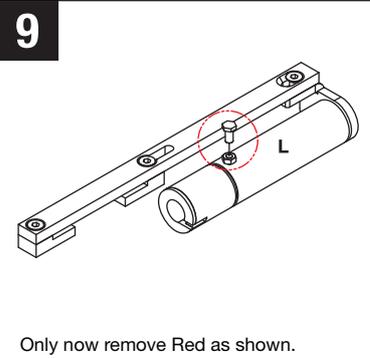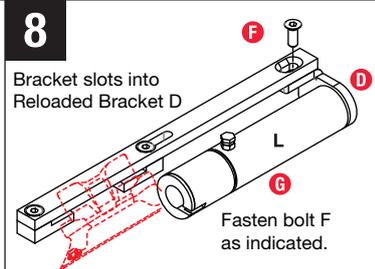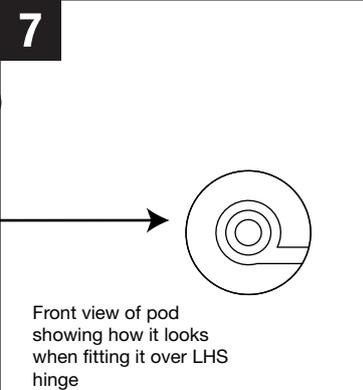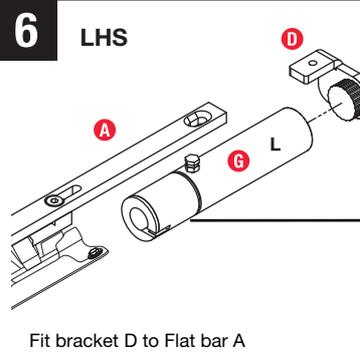

**16**

**SHOULD YOU WANT TO INCREASE YOUR PRELOAD OR REINSTALL YOUR PRELOAD IF REMOVED FROM THE VEHICLE PLEASE RETURN BOTH POD CYLINDERS (ITEM G & H) TO YOUR CLOSEST STOCKIST FOR ASSISTANCE**

FITTING CODE	MANUFACTURER	MODEL TYPE	YEAR	STOCKIST	PRODUCT	REVISION	LABOUR	DATE	PAGE
RL0710	MERCEDES	X CLASS	2016 onwards	GENERAL USE	EZDown RELOADED	2	25min	17/08/2018	2
TORQUE – N.m	★ 27N.m±2N.m			★ 15N.m±2N.m				www.ezdown.co.za	

**NB: After installation please close tailgate gently to ensure that there is no interference with any hardware.**

**IMPORTANT:**

No liability will be incurred by Industrial Specialised Applications company, for injury, death, or property damage caused by a product which has been set up, operated, and/or installed contrary to EZDown installation guide/manual, or which has been subjected to misuse, negligence, or accident, or which has been repaired or altered by anyone other than Industrial Specialised Applications, or which has been used in a manner or for a purpose for which the product was not designed.

